CAMERAS

The DID provides input for up to four cameras and has automatic left, right and reverse camera switching, giving the driver an immediate view of the intended direction. To access the camera menu, push the Camera button on the left side or touch the Camera icon on the Home Screen.

Viewing a camera: To view a specific camera, touch the icon of the desired camera. To switch cameras, push the Back button and select a different camera.

Camera Settings: Touch the Settings icon in the Camera menu. Options are enabled when a green check mark is shown in the box to the left of the option. When enabled, "auto reverse" and "auto turn signal" will override any other system screen and display the camera view on the screen. When turning or reversing is complete, the display returns to the previous screen.

Auto Reverse: Enable auto reverse to display the rear-mounted camera when the vehicle is shifted into reverse gear.

Auto Turn Signal: Enable auto turn signal to display the left or right camera views when the left or right turn signal is activated.

SYSTEM (configuration)

The System function allows configuration of overall system functions such as screen brightness, volume and tone settings and provides system information. Access the System menu by pushing the System button on the front of the unit. In the System menu, the following functions are available:

Screen: Slider controls are for adjusting the screen brightness and contrast. Touch the arrows on either side of the sliders to decrease or increase the value. Touch either arrow beside the Auto-Dim option to enable or disable this option.

Volume: Sets the relative volume of speech, alarms and music. If you find that commands, alarms or music are too quiet or loud compared to other audio, move the slider for that function to the left or right to decrease or increase the volume.

System: Displays system information such as serial number, software versions, map version, and more. Use the up and down arrows on the right side to show more information.

Overrides: Certain functions are not available when the vehicle is moving. This safety feature can be overridden by accessing the Overrides screen in the System menu. Read the safety risk warning on the screen before overriding speed-based lockouts. To override, touch the "Disable speed-based lockouts" item. A green check mark will appear indicating the override is active.

Language: Allows a choice of English, Spanish or Canadian French. Touch the language to use, then "OK" to change languages and restart the system in the new language.



Warning

You assume total responsibility and risk for using the system without speed-based overrides. Failure to pay attention to the operation of your vehicle could result in death, serious injury, or property damage. Do not permit viewing or using the system to distract you from safe vehicle operation.

Use of the DID is expressly restricted to the terms of the End-User Software License Agreement stated in the Users Manual. IF YOU DO NOT AGREE TO THE END USER LICENSE AGREEMENT (EULA), DO NOT USE THE T8065 DRIVER INFORMATION DISPLAY UNIT (HARDWARE) OR COPY THE SOFTWARE. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE HARDWARE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).



Driver Information Display (DID) Quick Start Guide

Use this guide as a supplement to the Operating Instructions Manual that can be downloaded from www.lectronix.biz/support.html



For service and technical support, contact your International[®] dealer

INTRODUCTION

Front panel button functions

Audio ** Brightness/On-Off

Camera Not used

Navigation Go Back to previous screen

Info System Menu
Home Select item

Screen Movement

Zoom in/out

Conventions Used in this Guide

Buttons. The DID has many control buttons. Physical buttons are located around the front panel of the system. Soft buttons are icons displayed on the touch screen of the DID. In this guide, instructions to use a physical button will use the word Push. Instructions to use a soft button will use the word Touch. Touching the screen at the location of the soft button will activate it.

Touch Screen

The DID utilizes a Touch Screen, allowing many operational buttons to be displayed on the screen for selection by the user. When making a selection, gently touch the screen with your finger in the center of the button. Never use an object to touch the screen as it may damage the touch screen membrane.

Home Screen

Display the Home Screen by pushing the Home button. The Home Screen displays all major functions of the DID which may be selected by touching the associated icon.

Introduction (cont.)

Turning the DID On and Off

The DID will automatically turn on when the vehicle ignition is turned on. Pushing the Brightness/On-Off button for 2 seconds can turn off the system. Turn the unit back on by pushing the button again.

Standby Operation

If the vehicle ignition switch is turned off for less than 2 hours, the DID will remain in a low power standby state, ready for immediate use when the vehicle is restarted. After two hours in standby, the system will completely turn off. When the system is turned on from the OFF state, a short period of initialization is required.

Accessing menus: When in a submenu that has more selections, there will be left and right arrows beside the menu bar at the top of the screen. Touch them to access more options. You can also touch the menu item, which will display a drop-down menu of all options. Touch the desired option from the drop-down menu.

Accessing main menus: Pushing a main menu function button will return you to the previous screen viewed within that function. Push the function button a second time to return to the main menu.

AUDIO SYSTEM

The DID connects to the truck radio to provide audio output. The DID supports USB audio playback and provides audio for system sounds and navigation directions. The radio controls volume, tone, balance and fade functions for the audio. To play USB audio, push the audio button on the front of the system or touch the Audio icon on the Home Screen to access audio functions. The system will automatically detect and play MP3 files when a memory stick is inserted. Use on-screen controls for playback.

NAVIGATION (Premium Unit Only)

To access Navigation, push the Navigation button or touch the Navigation icon on the Home Screen. If the map is displayed, push the Navigation button a second time to enter destination.



Caution

When navigating, carefully compare displayed information to other navigation sources, including information from street signs, visual sightings, and maps. For safety, pull off the road before making any adjustments to the system or resolving any navigation discrepancies or questions.



Warning

You assume total responsibility and risk for using this device. Failure to pay attention to the operation of your vehicle could result in death, serious injury, or property damage. Do not permit viewing the screen to distract you from safe vehicle operation.

Navigation Functions

View Map: Touch to view the map. This icon can be used at all times, whether actively routing or not.

Where To?: Touching the Where To? icon starts the process of entering a destination for a new route to navigate. From here there are many ways to select your destination.

Stop Guidance: When a route is in progress, touch this icon to stop routing. A confirmation screen will ask if you are sure.

Show Route: When a route is in progress, touch this icon to show text directions to your destination.

Vehicle Config: Touching the Vehicle Config icon will display the Vehicle Config screen. In the Vehicle Config screen, vehicle physical information can be entered as well as turning on or off navigating logistics.

Settings: Displays the Navigation Settings menu where navigation settings can be customized.

INFO

The Info function provides data about the operating conditions of the vehicle, periodic maintenance reminders, alarms, tire pressures, trip logs, and check lists and allows for adjusting the system clock. Push the Info button on the front of the unit or touch the Info icon on the Home Screen to access the Info main menu for the following functions:

Trip Computer: Maintains a trip log consisting of Trip, Day and Leg segments. Allows for trip statistics to be collected, providing feedback on the efficiency of the trip.

Status: Provides fuel use data, average speed, engine statistics, and electrical system parameters.

Alarms: Shows any active alarms in the system.

Maintenance: Provides many vehicle maintenance items to remind driver/mechanic of required services.

Tire Pressures: Accesses the Tire Pressure Monitor system. Add and delete sensors, monitor tire pressures and set low pressure alarms

Check list: Check lists of safety related tasks are provided to remind the driver of items to check before departure.

Clock: Allows for adjusting the clock to the proper time zone.

Pinned Items: shows all pinned items

Tire Pressure Monitor: Touching the Tires icon in the Info menu displays a representation of the vehicle and tires where the current state of each tire is shown. Touch a tire to display information about that tire. Touch the **Settings button** to adjust target tire pressures.

Pinning: Most items in the INFO section can be "pinned" so that they show in the small Status Window on the left side of the screen. To pin an item, go to the item's menu and touch the item. The item will be displayed – touch the "Pin" button and a green stickpin will appear in the upper left corner of the screen, signifying that it is pinned. Touch the button (now labeled "Unpin") again to un-pin.

