



Navion™ R5000

Operating Instructions



Read these instructions carefully before using this product and keep this manual for future reference.

© 2006, 2007 Lectronix, Inc.

Part Number – 15898-A.1

DISCLAIMER

THIS IS A DISCLAIMER OF LIABILITY AND DAMAGE RESPONSIBILITY AS REGARDS TO LECTRONIX, INC. AND GARMIN RELATING TO YOUR USE OF THE LECTRONIX NAVION™ R5000 SYSTEM. READ IT CAREFULLY. YOU ASSUME TOTAL RESPONSIBILITY AND RISK FOR USING THIS SYSTEM.

Failure to properly focus on the operation of your motor vehicle can result in death, serious injury and property damage. This R5000 device should never be used at a time or in a manner that distracts you from properly focusing on operation of the motor vehicle in which it is installed. Our concern is for your safety. We ask that you fully cooperate with and share that concern.

Always operate the vehicle in a safe manner and in full compliance with speed limits, road safety signs and all other laws and devices which regulate operation of a motor vehicle. Be and remain aware of driving conditions at all times when using this system while operating a motor vehicle.

Operation of this unit, including its camera, navigation, audio and other features can be distracting to your operation of the motor vehicle. While the system is intended to provide both entertainment and helpful vehicle and navigation information, it is not intended to, nor should you allow it to distract you from properly focusing on operating the motor vehicle in which it is installed. It is up to you to minimize or prevent such distraction.

Learn how to use this system before placing the vehicle in operation. Minimize the amount of time spent viewing the screen of the unit while driving and use voice prompts whenever possible. Do not attempt to adjust settings of the system or resolve any malfunction with it while driving. Instead, pull off the road in a safe and legal manner and then adjust its settings or deal with any malfunction. In the event of malfunction, disable the unit (turn power off or remove power from the system).

In addition to its multiple other functions, your R5000 system may be equipped with the optional Garmin GVN52 navigation unit. The navigation functions are provided by Garmin and are displayed on the R5000 screen. The use of such navigation functions are the subject of a separate Disclaimer from Garmin contained in the Garmin GVN52 Owner's Manual made available to you before use. Read that Garmin Disclaimer as it is also applicable to your use of this system.

When navigating, carefully compare information displayed on the unit to all available navigation sources, including information from street signs, visual sightings, and maps. Do not enter destinations, change settings or access any functions requiring prolonged use of the controls of the unit while operating your motor vehicle. For safety, pull off the road before making any adjustments to the system or resolving any navigation discrepancies or questions.

Table of Contents

Safety Information	1
Warnings	1
Cautions	3
Notes on Use: Liquid Crystal Panel	3
Getting Started	4
Understanding Your Navion™ R5000	4
Garmin GVN 52 Owner's Manual	4
Satellite Radio User's Guide	5
Controls, Applications and Functions	5
Turning the Navion™ R5000 On and Off	5
Standby Operation	5
Selecting Applications and Functions	6
The Navion™ R5000 Display	7
Using the Sound Controls	8
Adjusting Sound Settings	8
Adjusting the Display	9
FM, AM and WB Radio	10
Selecting and Tuning the Radio	10
Seek and Scan	10
Saving and Recalling Radio Stations	10
Sirius Satellite Radio	12
Tuning the Satellite Radio	13
Saving and Recalling Satellite Radio Stations	13
Subscribing to Sirius Satellite Radio	13
Parental Lockout and Channel Access	14
Locking a Channel and setting a Lock Code	14
Unlocking a Channel and removing a Lock Code	15
Accessing a Locked Channel	15
Resetting the Lock Code	15
Compact Disc (CD)	16
Playing CDs	16
CD Shuffle and Repeat Modes	17
Playing MP3/WMA files on CD	17
USB Audio	18
Inserting the Memory Stick	18
USB Shuffle and Repeat Modes	19
Playing MP3/WMA files on USB	19
External Audio	20
Playing Files on Portable Audio Devices (MP3 Players)	20
Camera (CAM)	21
Selecting Cameras	21
Configuring the Camera Options	22

Vehicle Status (Status)	24
How to View Status Information in a Background Window	25
Alarms	26
Viewing Alarms.....	26
Disabling and Enabling Alarms	26
Vehicle Maintenance (Maint)	27
Updating Vehicle Maintenance Information	27
Trip Statistics (Trip)	28
Reviewing and Selecting Trip Statistic Items	28
Operator’s Checklist (Check)	29
Reviewing and Selecting Checklist Items	29
Clock and Date	30
Viewing Clock and Date in the Active Window.....	30
Setting the Clock and Date.....	31
Tire Pressure Monitor (Tires)	32
Tire Pressure Sensor Operation.....	32
Installing Tire Pressure Sensors	33
Removing Tire Pressure Sensors	34
Replacing Tire Pressure Sensors.....	34
Tire Pressure Alarms.....	34
Navigation (NAV)	35
Accessing the Navigation MAP	35
Configuring Navigation Options.....	37
Maintenance	38
Troubleshooting	39
If You Suspect Something is Wrong	39
Common Problems.....	39
Appendix A: One Year Limited Warranty	41
Appendix B: Service and Technical Support	42
Contact Lectronix, Inc.....	42
Appendix C: Software Notice	43
Software Notice	43
Open Source Software	43
Appendix D: Navion™ R5000 Technical Specifications	44
Technical Performance Specifications	45
Appendix E: Tire Pressure Monitoring Option	47
Sensor Specifications.....	47

IMPORTANT SAFETY INFORMATION

Safety Information

Read the operating instructions for the Navion™ R5000 and all other components of the system carefully before using the system. They contain instructions about how to use the system in a safe and effective manner. **FAILURE TO OBSERVE THE INSTRUCTIONS GIVEN IN THIS MANUAL MAY CAUSE INJURY OR DAMAGE AND VOID THE WARRANTY.**

This manual uses pictographs to show you how to use the product safely and to alert you to potential dangers resulting from improper connections and operations. The meanings of the pictographs are explained below. It is important that you fully understand the meanings of the pictographs in order to use this manual and the system properly.

	Warning	This pictograph intends to alert you to the presence of important operation instruction and installation instructions. Failure to heed the instructions may result in severe injury or death.
---	----------------	--

	Caution	This pictograph intends to alert you to the presence of important operation instruction and installation instructions. Failure to heed the instructions may result in injury or material damage.
---	----------------	--

Warnings

	Warning	Observe the following warnings when using this unit.
<ul style="list-style-type: none">• The driver should neither watch the display nor operate the system while driving. Watching the display or operating the system will distract the driver from looking ahead of the vehicle and can cause accidents. Always stop the vehicle in a safe location and use the parking brake before watching the display or operating the system.• Use the proper power supply. This product is designed for operation with a negative grounded 12 V DC battery system. Never operate this product with other battery systems, especially a 24 V DC battery system.• Protect the deck mechanism. Do not insert any foreign objects into the slot of this unit.• Do not disassemble or modify the unit. Do not disassemble, modify the unit or attempt to repair the product yourself. If the product needs repair, consult your dealer or contact technical support (see Appendix B).• Do not use the unit when it is out of order. If the unit is out of order (no power, no sound) or in an abnormal state (has foreign objects in it, is exposed to water, is smoking, or smells), turn it off immediately and consult your dealer.• Refer installation to qualified personnel.		

IMPORTANT SAFETY INFORMATION



Warning

Observe the following warnings when installing.

- **Disconnect the lead from the negative (-) battery terminal before installation.**
Wiring and installation with the negative (-) battery terminal connected may cause electrical shock and injury due to a short circuit. Some vehicles equipped with the electrical safety system have specific procedures of battery terminal disconnection.
FAILURE TO FOLLOW THIS PROCEDURE MAY LEAD TO THE UNINTENDED ACTIVATION OF THE ELECTRICAL SAFETY SYSTEM RESULTING IN DAMAGE TO THE VEHICLE AND PERSONAL INJURY OR DEATH.
- **Never use safety-related components for installation, grounding, and other such functions.**
Do not use safety-related vehicle components (fuel tank, brake, suspension, steering wheel, pedals, airbag, etc.) for wiring or fixing the product or its accessories.
- **Do not install the product on the air bag cover or in a location where it interferes with airbag operation.**
- **Check for piping, gasoline tank, electric wiring, and other items before installing the product.**
If you need to open a hole in the vehicle chassis to attach or wire the product, first check where the wire harness, gasoline tank, and electric wiring are located. Then open the hole from outside if possible.
- **Never install the product in a location where it interferes with the driver's field of vision.**
- **Never branch the power cord to supply other equipment with power.**
- **After installation and wiring, you should check the normal operation of other electrical equipment.**
Using electrical equipment that is not operating normally may cause fire, electrical shock or a traffic accident.
- **In the case of installation to an airbag-equipped vehicle, confirm warnings and cautions of the vehicle manufacturer before installation.**
- **Make sure the leads do not interfere with driving or getting in and out of the vehicle.**
- **Insulate all exposed wires to prevent short-circuiting.**

IMPORTANT SAFETY INFORMATION

Cautions

	Caution	FOLLOW THE LAWS AND REGULATIONS OF YOUR STATE, PROVINCE OR COUNTRY FOR INSTALLATION.
---	----------------	--

	Caution	THIS PRODUCT IS A CLASS I LASER PRODUCT. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR BY YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.
---	----------------	--

Notes on Use: Liquid Crystal Panel

- Do not cause impact to the liquid crystal panel.
- When the temperature is very cold or very hot, the image may appear unclear or may move slowly.
- In order to protect the liquid crystal panel, keep it out of direct sunlight while the unit is not in use.
- Sudden changes in the temperature inside the vehicle such as those which occur immediately after the vehicle's air conditioner or heater has been turned on may cause condensation (droplets of water) to form and, as a result, the panel may not work properly. Do not use the unit while these symptoms are in evidence but leave the unit standing for about an hour, and then resume or start use.

INTRODUCTION

Getting Started

Understanding Your Navion™ R5000

The Navion™ R5000 combines radio, CD/MP3 player, rear-view camera system, and advanced engine, coach, and trip monitors into a single integrated system designed specifically for use in Recreational Vehicles. The unit installs easily in the same dashboard space commonly used for existing camera monitors, and replaces three separate systems (camera, radio, and vehicle computer) with one. The Navion™ R5000 also allows navigation, satellite radio and tire pressure monitoring as options accessible from one common interface.

System Overview

- Integrated Audio Entertainment, Camera, Vehicle Monitor, and Trip Computer
- In-Dash Controller Unit with 7.0" Color TFT LCD Display
- CD Reader for Regular and Compressed Audio (MP3/WMA)
- Integrated 200W Amplifier for Four (4) Audio Channels at 50W Each
- Clock
- Video Output (allows Navion™ screen, any camera, or navigation to be routed to additional monitor)

Camera Display

- Supports Three (3) Cameras
- Automatic Camera Select by Reverse and Turn Indicators
- Supports Rear Camera Microphone

Advanced Digital Audio Subsystem

- Digital AM / FM / WB Tuner
- Satellite Radio Controller (External Tuner Module)*
- CD Audio
- Compressed Audio (MP3) from CDs & USB Memory Sticks
- DSP-based Digital Audio Processing
- 5-Band Parametric Equalizer

Trip Computer

- Multiple Trip Odometers
- Speed and Distance Tracking
- Fuel Consumption

Vehicle Monitor

- Monitor Coach and Engine Data from Vehicle Busses
- Alarms for Fault and Out of Range Conditions
- Operator Checklists for RV Arrival, Departure, and Storage Tasks
- Maintenance Scheduling & Reminders
- Vehicle Bus connections for J1939

Expansion Options

- Navigation (Video, and Audio)*
- Sirius Satellite Radio * †
- Audio Input for MP3 Players or other Portable Audio Devices
- USB Interface for Future Expansion
- Audio Line out (1 stereo)
- Video Output (NTSC)
- Tire Pressure Monitoring System*

* Some features are optional and may not be installed with your Navion™ R5000.

† A subscription is required to use this service.

Garmin GVN 52 Owner's Manual

If your Navion™ R5000 includes the optional Garmin GVN 52 navigation system, please refer to the Garmin GVN 52 Owner's Manual included with your vehicle for information regarding the operation of this service.

INTRODUCTION


Satellite Radio User's Guide

If your Navion™ R5000 includes the optional Satellite Radio system, please refer to the User's Manual included with your vehicle for information regarding the operation of this service.

Controls, Applications and Functions

The front panel controls let you select the Navion™ R5000's Applications and Functions. Refer to the following figure to understand how to use the front panels and controls.

Navion™ R5000 Front Panel Buttons & Controls

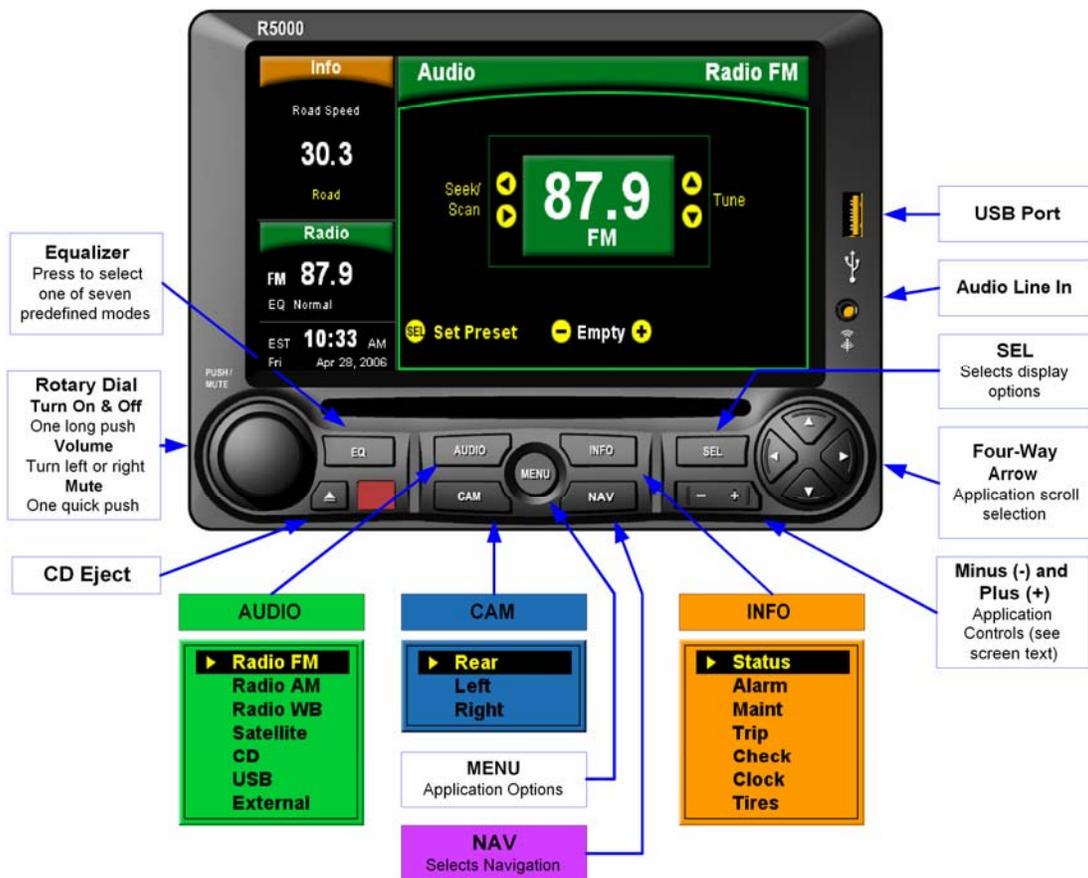

Turning the Navion™ R5000 On and Off

To turn the system on or off, press and hold the rotary dial for about two seconds after the ignition is turned on in your vehicle. When the system turns on, a standard display screen will appear. The R5000 will then automatically transition to the most recent Application and Function.

Standby Operation

The Navion™ R5000 will be placed in a standby state for approximately 15 minutes when the vehicle's ignition key is turned off. When ignition is restored, the system will immediately return to the last Application and Function. After 15 minutes the R5000 will be turned off.

INTRODUCTION

Selecting Applications and Functions

Each Application (i.e., Audio, Camera, Information or Navigation) includes a subgroup of Functions which you select using the Application controls and four-way arrow keys on the front of the Navion™ R5000. The following table describes the Applications and lists their related Functions.

- 1) Select an Application by pressing an Application key.
- 2) To select a Function, continue to press the Application key until the desired Function is highlighted. You can also use the **UP** and **DOWN** keys (from the Four Way Arrow group) to select a Function.
- 3) Press the **SEL** key to select the Function or wait until the Function is automatically selected.

Navion™ R5000 Applications and Related Functions


Application Keys	Function
<p>AUDIO</p> <p>The Navion™ R5000 offers a broad range of audio features, including all standard radio bands, along with Weather Band and Satellite Radio. You can play CDs and music files from your USB memory sticks, or use the external function to connect your iPod and MP3 player.</p> <p>The five-band parameter equalizer and DSP-based digital audio processor in combination with a 200W amplifier provide quality sound for long miles on the road.</p>	<p>Radio FM Radio AM Radio WB Satellite Radio (if installed) CD USB External (Audio Line In)</p>
<p>CAM (Camera)</p> <p>Use the side and rear cameras to avoid accidents and make backing into campsites and driveways fast and easy. The rear camera microphone lets you follow verbal directions from someone guiding you.</p>	<p>Rear Camera Left Camera Right Camera</p>
<p>INFO (Information)</p> <p>The INFO applications provide you with valuable status and maintenance information about your recreational vehicle. Refer to departure checklists to help you prepare for the next leg of your trip. Update and use the oil change and fluid records to keep up with maintenance. Prevent problems by paying attention to the status alarms alerting you to potential problems with your vehicle.</p>	<p>Status Alarm Maint (Maintenance) Trip (Trip Computer Check (Checklist) Clock (Clock and Date) Tires (Tire Pressure Sensor)</p>
<p>NAV (Navigation)</p> <p>When configured with the Optional Garmin GVN 52 Navigation system, this selection displays the navigation system information.</p>	<p>Optional Navigation System</p>

INTRODUCTION

The Navion™ R5000 Display

The Navion™ R5000 display is divided into four windows as shown below. When you select a new Application and Function, the information associated with the current Application and Function may automatically move from the Active Window to the Background or Audio Windows.

Application Display Layout

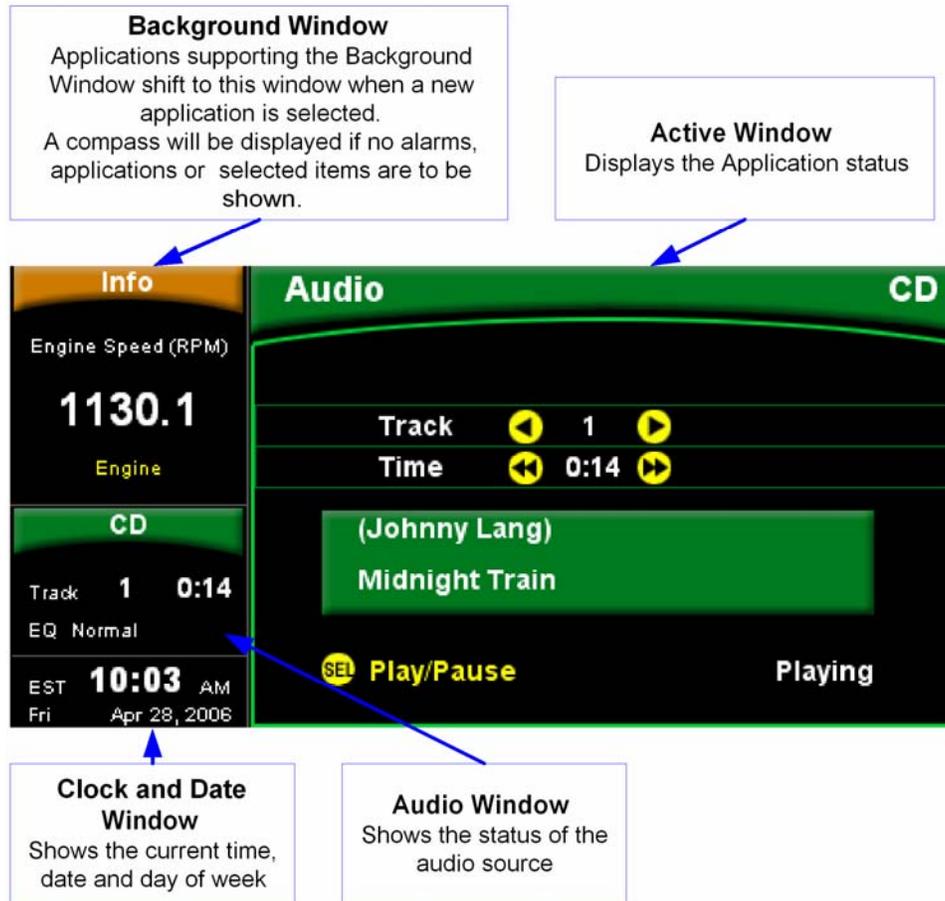

INTRODUCTION

Using the Sound Controls

The sound controls affect the sound source, such as the CD or FM radio.

Volume

Use the rotary knob to change the volume, regardless of the audio source or Active Application. Turn the knob to the right to increase the volume and left to decrease the volume. A numerical volume number appears in the Audio Window.

Muting Audio

To mute audio, quickly press the rotary knob. "Mute" will appear in red in the Audio Window.

To unmute audio, press the rotary knob again. "Mute" will disappear from the audio window.

Equalizer (EQ)

To set the Equalizer, repeatedly press the **EQ** button on the front panel to select one of the seven equalizer selections as listed below:

- Normal (Flat)
- Country
- Classical
- Talk
- Rock
- Jazz
- Pop

Adjusting Sound Settings

You can adjust Sound from any Application.

- 1) Press the **MENU** button to access the **Sound** parameters.
- 2) Use the **LEFT** or **RIGHT** arrow key to select the **Sound** tab.
- 3) Use the **UP** or **DOWN** arrow key to select the parameter for adjustment.
- 4) Use the **LEFT** or **RIGHT** arrow key to adjust the selected parameter.
- 5) When finished, press the **MENU** button again.

Navion™ R5000 Sound Buttons & Controls



INTRODUCTION

Adjusting the Display

You can adjust the Screen from any Application.

- 1) Press the **MENU** button to access the screen parameters.
- 2) Use the **LEFT** or **RIGHT** arrow key to select the **Screen** tab.
- 3) Use the **UP** or **DOWN** arrow key to select the parameter for adjustment.
- 4) Use the **LEFT** or **RIGHT** arrow key to adjust the selected parameter.
- 5) When finished, press the **MENU** button again.
- 6) The R5000 has the ability to output video to an external monitor. The Video Output selection is used to select this output from the following options:

- Auxiliary (default) – Garmin output if option is installed
- Main Display
- Disabled
- Rear Camera
- Left Camera
- Right Camera

Navion™ R5000 Screen Buttons & Controls



AUDIO

FM, AM and WB Radio

The Navion™ R5000 system's FM, AM and WB (Weather Band) Radio Functions are selected via the **AUDIO** button.

FM/AM/WB Radio Buttons & Controls



Selecting and Tuning the Radio

- 1) Press the **AUDIO** button.
- 2) Press the **AUDIO** button repeatedly to step through the radio bands.
- 3) When you reach the desired radio band, either press the **SEL** button to enable that band or wait until the highlighted option is automatically selected.
- 4) Use the UP and DOWN keys to tune the radio.
- 5) Use the LEFT and RIGHT keys to seek or scan to the next station.

Seek and Scan

- 6) To **Seek** to the next station, press the **LEFT** or **RIGHT** arrow key.
- 7) To **Scan** stations, press and hold the **LEFT** or **RIGHT** arrow key for 2 seconds. The radio will scan to the next available radio station and will pause for approximately 3 seconds before scanning to the next station. To stop scanning, press any arrow key.

Saving and Recalling Radio Stations

You can easily store (set) and recall your favorite radio and satellite stations using the **SEL** button. Separate station preset lists are maintained for AM, FM and Satellite Radio.

AUDIO

To save a radio station - Tune to the radio station and press the **SEL** button. The preset list will update.

To recall a radio station - Press the **MINUS (-)** or **PLUS (+)** keys to step through the list of stored radio stations.

To remove a station from the preset list - Tune to that station and press the **SEL** button. The preset list will update. When **Empty** is displayed, no radio stations are saved.

AUDIO

Sirius Satellite Radio


The Navion™ R5000 system is compatible with an optional Sirius Satellite Radio. This section describes the features and functions of the Satellite Radio system. Before using the optional Satellite radio, you need to subscribe to the Sirius service either by phone or via the Internet (see Subscribing to Sirius Satellite Radio).

SIRIUS Satellite Radio: The Best Radio On Radio

With everything from 100% commercial-free music to in-depth sports coverage, plus news, talk and the hottest entertainment – you can always hear exactly what you want.

- The only home of 100% commercial-free music. Whether you're discovering new music, or rediscovering songs you haven't heard in years – you'll hear it all on SIRIUS.
- Live play-by-play and expert talk from the biggest leagues. NFL, every game, every week, everywhere. Plus NFL Radio 24/7 news and opinions from top NFL pros, 40 games a week from NBA and College Sports from over 150 schools. Plus NASCAR moving exclusively to SIRIUS in January 2007.
- Entertainment, Comedy and Talk that can't be found anywhere else. From 2 channels of Howard Stern, Blue Collar Comedy with Jeff Foxworthy and Larry the Cable Guy to Maxim and Playboy Radio.
- Especially for Women. Martha Stewart and her team will inspire you 24/7 along with Cosmo Radio, Deepak Chopra Wellness Radio and other exclusive talk show hosts.
- World Class News, traffic and weather. Fox, CNN, NPR and BBC. Local traffic and weather for the top 20 cities.
- Family & Kids: G-rated fun for everyone with Radio Disney, Discovery Kids Channel, Laugh Comedy and more.

Satellite Radio Buttons & Controls

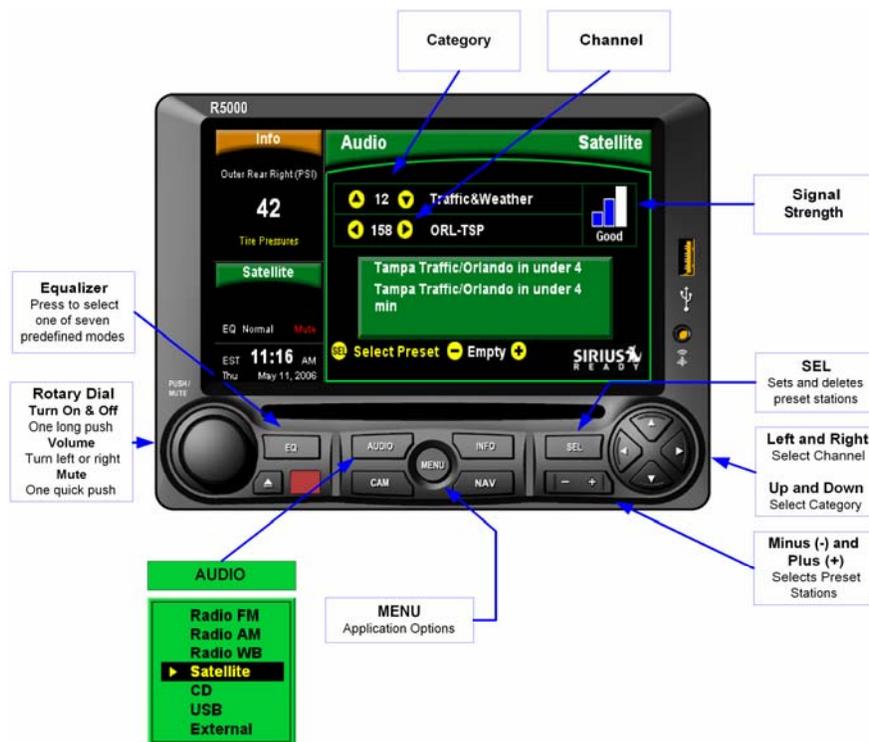

AUDIO

Note: The Satellite selection will not be present if the optional Satellite Radio is not connected to the R5000.

Tuning the Satellite Radio

- 1) Press the **AUDIO** button.
- 2) Press the **AUDIO** button until **Satellite** is highlighted.
- 3) Either press the **SEL** button or wait until **Satellite** is automatically selected.
- 4) Use the **UP** and **DOWN** buttons to select the Music Category.
- 5) Use the **LEFT** and **RIGHT** buttons to select the Music Channel.

Note: The signal strength indicator provides an indication of the strength of the satellite signal.

Saving and Recalling Satellite Radio Stations

You can easily store (set) and recall your favorite radio and satellite stations using the **SEL** button. Separate station preset lists are maintained for AM, FM and Satellite Radio.

To save a radio station. Tune to the category and station of interest. Press the **SEL** button. The preset list will update.

To recall a radio station. Press the **PLUS (+)** or **MINUS (-)** keys to step through the list of stored stations.

To remove a station from the preset list. Tune to category and station of interest. Press the **SEL** button. The preset list will update. When **Empty** is displayed, no radio stations are saved.

Subscribing to Sirius Satellite Radio

Before you can use the optional Satellite radio, you need to subscribe to the Sirius service either by phone or via the Internet.

By phone: 1-888-539-7474.

By the Internet: <http://www.sirius.com>

Before activating your service, first:

- 1) Make sure your SIRIUS tuner is installed with the antenna facing skyward.
- 2) Tune to "Category – ALL" and to "Channel 184".

Also have on-hand:

- 1) The System Identification number (SID) from your SIRIUS receiver. This number is located on the Sirius Receiver. It can also be obtained from the **Settings** screen. Press the **MENU** key and use the **LEFT** or **RIGHT** arrow keys to select the **Settings** screen. Refer to the SID text for the SID number.
- 2) A major credit card.

Note: Without a subscription, there will be limited Satellite service.

AUDIO

Unlocking a Channel and removing a Lock Code

- 1) Tune the satellite radio to the locked Category and Channel. No audio will play and the Locked notification will appear.
- 2) Press the **MENU** key.
- 3) Press the **LEFT** or **RIGHT** arrow key to select the **Settings** screen.
- 4) Press the **DOWN** arrow key to move to the keyboard.
- 5) Enter the Lock code as set in the previous section by pressing the **LEFT** and **RIGHT** arrow keys to move to the first keyboard number. Press **SEL** to enter the number into the Code Display.
- 6) Continue using the **LEFT** and **RIGHT** arrow keys to enter the 4 digit code.
- 7) Move to the "UL" keypad button and press **SEL** to unlock the Channel.
- 8) Press **MENU** to return to the Sirius audio screen.

Accessing a Locked Channel

This feature allows access to a channel as needed. Enter the lock code only when the specific channel is active. Once the channel is changed, the channel will stay locked until the lock code is reentered.

- 1) Tune the satellite radio to the locked Category and Channel. No audio will play and the Locked notification will appear.
- 2) Press the **MENU** key.
- 3) Press the **LEFT** or **RIGHT** arrow key to select the **Settings** screen.
- 4) Press the **DOWN** arrow key to move to the keyboard.
- 5) Enter the Lock code as set in the previous section by pressing the **LEFT** and **RIGHT** arrow keys to move to the first keyboard number. Press **SEL** to enter the number into the Code Display.
- 6) Continue using the **LEFT** and **RIGHT** arrow keys to enter the four-digit code.
- 7) Move to the "A" keypad button and press **SEL** to unlock the Channel.
- 8) Press **MENU** to return to the Sirius audio screen

Resetting the Lock Code

To reset the lock code to the **factory default of 0000** follow this procedure.

- 1) Press the **Audio** button to until **Satellite** is selected.
- 2) Once in the Satellite application, press the **MENU** key to access the satellite menu.
- 3) Press and hold the **DOWN** arrow key for 5 seconds.
- 4) Press **MENU** to return to the Sirius audio screen

AUDIO

Compact Disc (CD)

The Compact Disc (CD) player is compatible with standard audio CDs as well as audio read/write CDs that include MP3 or WMA files made on your computer. You can play the songs in normal (sequential order) or shuffle mode.

CD Playback Buttons & Controls



Playing CDs

- 1) Insert the CD into the **CD slot** with the text on the CD facing up. When inserted, the audio source automatically changes to CD, and begins playing the first track.
You can also select the CD by pressing the **AUDIO** button repeatedly until **CD** is highlighted. Press **SEL** to select the CD or wait and CD will be selected automatically.
 - If there is no CD in the system, a reminder to insert a CD will be shown.
 - If there is a CD installed in the system it will start to play.
- 2) If the CD has music in more than one folder, use the **UP** and **DOWN** arrow key to change folders.
- 3) Use the **LEFT** and **RIGHT** arrow keys to move to the next and previous track as well as fast forward and rewind.
- 4) Press the **SEL** button to pause and resume CD playback.



Caution

Inserting foreign objects into the CD slot may cause injury or damage.
Do not insert CDs with adhesive labels into the CD slot.

AUDIO

CD Shuffle and Repeat Modes


Shuffle mode plays CD tracks in a random sequence.

Repeat mode plays CD tracks from beginning to end of the CD repeatedly.

If both are selected, the system will repeatedly play the CD in shuffle mode.

- 1) Press the **MENU** button to view the options.
- 2) Move to the **Settings** tab with the **LEFT** or **RIGHT** arrow key.
- 3) Use the **UP** and **DOWN** arrow key to highlight either the Shuffle or Repeat selection.
- 4) Press the **SEL** button to check the desired selection.
- 5) Press the **MENU** button again to return to the CD display screen.

CD Player Shuffle and Repeat Buttons & Controls

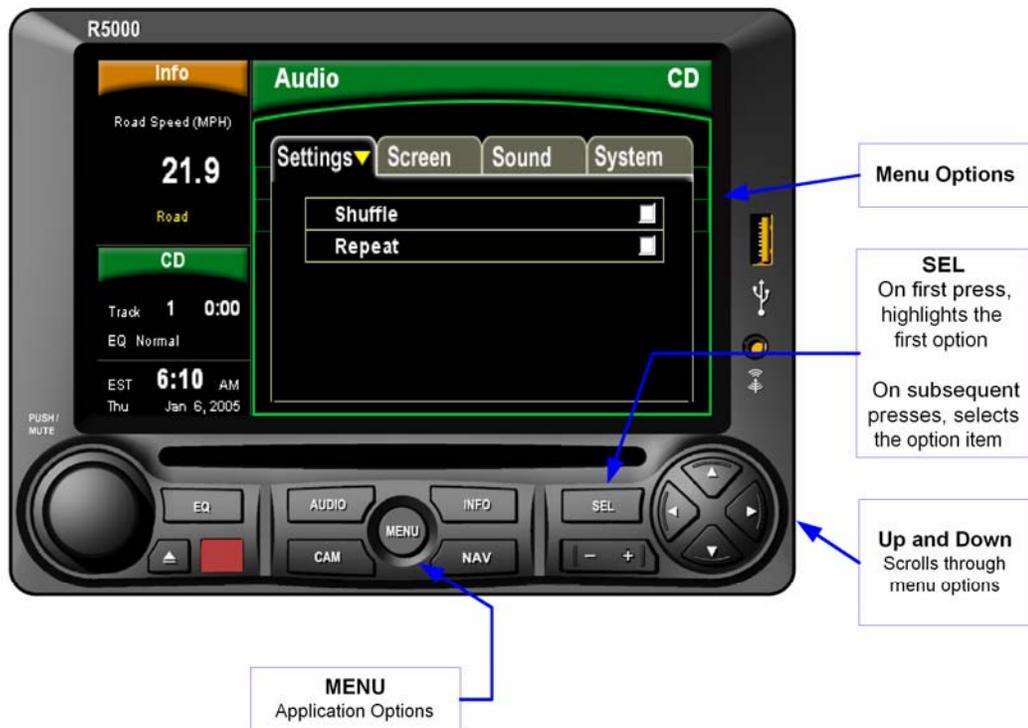

Playing MP3/WMA files on CD

MP3 (MPEG Audio Layer-3) and WMA (Windows Media™ Audio) are digital audio compression formats.

- A maximum of 99 folders per CD is supported. Folders may be nested up to this limit.
- Only a sampling frequency of 44.1 kHz is supported
- UDF formatted CDs will play, but are not recommended.

AUDIO

USB Audio

The system will automatically detect and play MP3 and WMA encoded music from a USB stick when it is inserted into the system (The system may take a few seconds to recognize the USB stick). The song information associated with each music track will appear on the display screen if it is encoded with the song.

USB Audio Buttons & Controls



Inserting the Memory Stick



Caution

Carefully insert the USB Memory stick in the vertical USB port. Do not force the memory stick into the slot. If it does not appear to fit, turn it 180 degrees and try again. Do not insert foreign objects into the USB port.

- 1) Press **AUDIO** and **USB** to play from the USB stick if it is already installed in the system.
- 2) If the USB stick has music in more than one folder, use the UP and DOWN arrow key to change folders.
- 3) Use the **LEFT** and **RIGHT** arrow keys to move to the next and previous track as well as fast forward and rewind.

AUDIO

USB Shuffle and Repeat Modes

- 1) Shuffle mode plays tracks on a random sequence. "Repeat" plays tracks from beginning to end repeatedly.
- 2) Press the **MENU** button to view the options.
- 3) Move to the **Settings** tab with the **LEFT** or **RIGHT** arrow key.
- 4) Use the **UP** and **DOWN** arrow keys to highlight either the Shuffle or Repeat selection.
- 5) Press the **SEL** button to check the desired selection.
- 6) Press the **MENU** button again to return to the **USB** display screen.

Playing MP3/WMA files on USB

MP3 (MPEG Audio Layer-3) and WMA (Windows Media™ Audio) are digital audio compression formats.

- WMA protected content is not supported.
- The WMA lossless codec is not supported.
- Only a sampling frequency of 44.1 kHz is supported.

AUDIO

External Audio

The Navion™ R5000 will play the audio output from your portable audio devices such as an iPod or MP3 player.

External Audio Buttons & Controls



Playing Files on Portable Audio Devices (MP3 Players)

- 1) Connect your MP3 player to the R5000 by cabling the MP3 player to the R5000's Audio Line In jack. Carefully insert the audio connector into the Audio Line In port on the front of the display.



Caution

Do not insert foreign objects into the Audio Line In jack.

- 2) When **External** is selected from the **AUDIO** menu, the R5000 will play the audio output from the portable audio device.

CAM

Camera (CAM)

The R5000 supports up to three cameras. Mount the cameras on the vehicle so that there is a left, right and a rear camera. The rear camera supports a microphone that can be automatically activated when the RV is shifted into reverse.

Camera (CAM) Buttons & Controls



Selecting Cameras


- 1) To display a camera view on the main window, press the **CAM** button.
- 2) Press the **CAM** button to highlight the camera of interest (**Left**, **Right** or **Rear**). This will define this camera view as the "preferred" camera view.
- 3) Press the **SEL** button to display the camera view or wait until the camera is automatically selected.
- 4) When the preferred camera is viewed, use the **LEFT**, **RIGHT** or **DOWN** arrow keys to provide a quick view of the other cameras. The camera view will display for approximately five seconds after which the camera view will return to the preferred camera view.

CAM

Configuring the Camera Options

When in the **CAM** view, pressing the **MENU** button provides a list of camera configuration options.

Camera MENU Configuration Options, Buttons & Controls

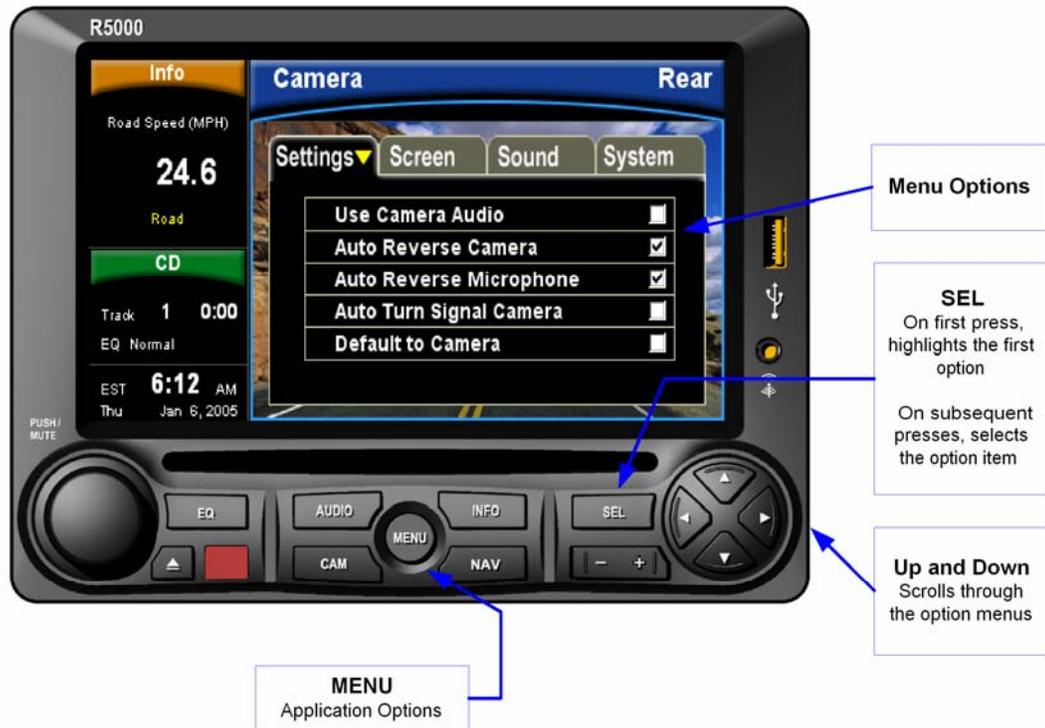

Camera MENU Options Table

Menu Option	Description
Use Camera Audio	Turns on the rear camera microphone. Once set, the microphone remains active and will override any entertainment audio sources when the camera view is the active application.
Auto Reverse Camera	Displays the rear camera view when the vehicle is placed in reverse. Note: If you have selected a preferred camera view other than rear (i.e. left, right), then this auto reverse selection will override your preferred selection and switch to the rear camera view.
Auto Reverse Microphone	Automatically turns on the microphone for the rear camera when the vehicle is shifted into reverse. Audio from other sources such as Radio, CD, or USB key will be muted when the vehicle is shifted into reverse.

CAM

Menu Option	Description
Auto Turn Signal Camera	Automatically switches the display to the left or right camera when the left or right turn signal is activated. When the turn signal is deactivated, the camera view returns to the previous application. Note: If Auto Reverse is enabled, then Auto Reverse will take priority over Auto Turn Signal Camera.
Default to Camera	When enabled the last camera viewed will be restored if there is no activity in another application for approximately 10 seconds.

INFO

Vehicle Status (Status)

The R5000 Vehicle Status display provides information about the operating conditions of the vehicle. The following table describes the information available in the status screens.

Screen	Status Description
Road	Traveling information such as road speed, fuel economy, fuel level, average fuel economy, total fuel used, instantaneous fuel rate and total vehicle distance is found here.
Engine	View engine RPM, oil temperature and pressure, coolant temperature and pressure and transmission oil temperature and pressure in this screen.
Electrical	Battery voltage and alternator status are available in this screen.
Environment	Interior and Exterior temperature as well as Barometric pressure and Heading can be viewed in this screen.
Miscellaneous	Washer Fluid Level and Engine Load can be viewed in this screen.
Tire Pressure	The pressure of the vehicle tires is displayed. This requires the optional Tire Pressure Sensors.

Note: The type and availability of status and alarm information is dependant on the make and model of the recreational vehicle.

Vehicle Status Buttons & Controls



INFO

How to View Status Information in a Background Window

You can view one of the fields from the status display in the Background window even when the status display is not the main Application.

- 1) **To select an item for display in the background window.** Use the **UP** and **DOWN** arrow keys to highlight the status item for display.
- 2) Press the **SEL** button to select the item. A check box will appear next to your selection. Selecting a different parameter will remove the previous item from the display.
- 3) **To remove an item from the background window.** Move to the selected item and press the **SEL** button again to uncheck the item.

Note: Selecting an item will override the information in the Background window unless there is an Alarm condition.

INFO

Alarms

The Navion™ R5000 continuously monitors system parameters and presents an alarm when the parameter is outside of normal operating conditions. When there is an alarm, an indicator in a red box appears in the background window, overriding anything that is displayed in that window. You should take note of the alarm and check your vehicle to correct the alarm condition.

If there is an Alarm condition, pressing **INFO** will take you to the **Alarm** screen.

Alarm Indicator Buttons & Controls



Viewing Alarms

- 1) Select the **INFO** button and scroll to **Alarm**.
- 2) Press the **SEL** button or wait until the **Alarm** screen is automatically selected. A list of alarms will appear.

Disabling and Enabling Alarms

- 1) When in the **Alarm** screen, use the **UP** and **DOWN** arrow keys to highlight the alarm of interest.
- 2) Press the **MINUS (-)** key to disable the Alarm.
- 3) Press the **PLUS (+)** key to enable an Alarm.



Caution


A disabled Alarm will not appear in the Background window. There will be no Alarm notification. The Alarm must be manually enabled to display in the Background window.

INFO

Vehicle Maintenance (Maint)

The Vehicle Maintenance Information helps you track and monitor key vehicle maintenance items. The maintenance item is shown on the left of the window. The Current column displays the number of miles driven since the item received attention. The Sched. column displays the manufacturer's recommended scheduled maintenance interval.

Vehicle Maintenance Buttons & Controls

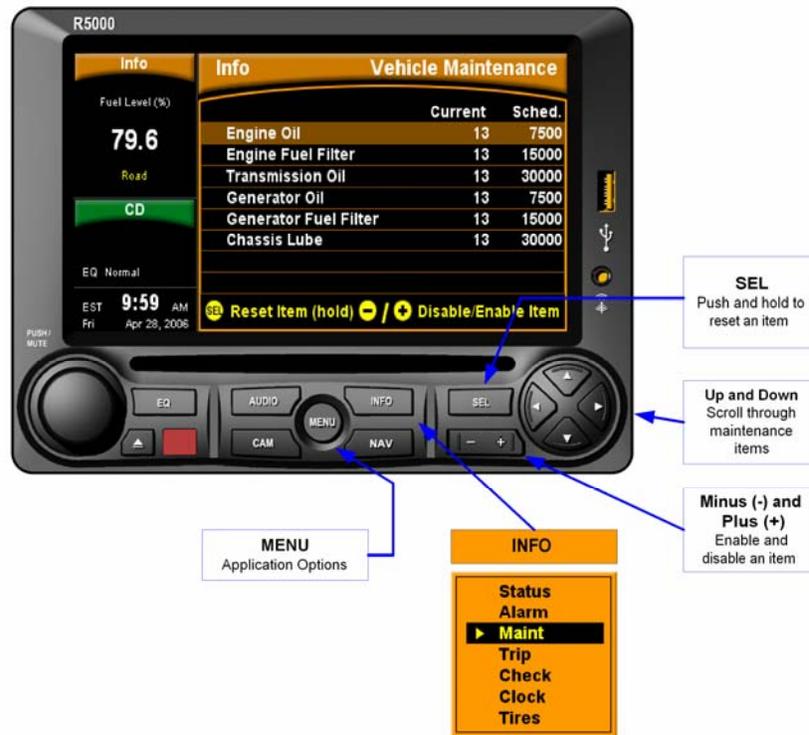

Updating Vehicle Maintenance Information

- 1) Press the **INFO** button until **Maint** is highlighted.
- 2) Press the **SEL** button or wait until **Maint** is automatically selected.
- 3) Use the **UP** and **DOWN** arrow keys to highlight **Maint** item of interest.
- 4) To reset an item, press and hold the **SEL** button.
- 5) To disable a maintenance item, move to the item of interest and press the **MINUS (-)** key.
- 6) To enable a maintenance item, move to the item of interest and press the **PLUS (+)** key.
- 7) An alarm will generate if the Current miles driven exceed the Scheduled (Sched.) miles driven. Turn off the alarm by resetting the current value.

INFO

Trip Statistics (Trip)

Trip statistics provide the operator with information while traveling. This information can include, traveling time, gallons of fuel used, average miles per gallon etc.

Note: The statistics available depend on the make and model of the recreational vehicle.

Trip Statistics Buttons & Controls



Reviewing and Selecting Trip Statistic Items

- 1) Press the **INFO** button until **Trip** is highlighted. Press the **SEL** button or wait until **Trip** is selected automatically.
- 2) Use the **LEFT** and **RIGHT** arrow keys to select the desired Trip Information page. Trip information is organized into DAY, LEG and TRIP.
- 3) To view a trip information item in the background window, use the **UP** and **DOWN** arrow keys to highlight the **Trip** item of interest. Press the **SEL** button to check the item to be displayed. To remove the item from the background window, uncheck the item by pressing the **SEL** button.
- 4) To reset trip information, press and hold the **SEL** button.

INFO

Operator's Checklist (Check)

The Operator's Checklist provides the operator with a series of predefined lists to use as a reference for typical procedures including Departure, Arrival, Preparation for Storage and Removal from Storage.

Operator Checklist Screen Descriptions Table

Screen	Description
Departure	A list of common departure tasks
Arrival	A list of common arrival tasks
Preparation for Storage	A list of common tasks to prepare for storage
Removal from Storage	A list of common tasks for removal from storage

Note: The above checklists are a representative list of common tasks and may not include all tasks for your vehicle. Consult your vehicle's operator's manual for more information.

Operator Checklist Buttons & Controls



Reviewing and Selecting Checklist Items

- 1) Press the **INFO** button until **Check** is highlighted. Press the **SEL** button or wait until **Check** is selected automatically.
- 2) Use the **LEFT** and **RIGHT** arrow keys to select the desired checklist.
- 3) Use the **UP** and **DOWN** arrow keys to highlight the **Check** item of interest. Press the **SEL** button to check or uncheck an item.
- 4) To uncheck all items, press and hold the **SEL** button.

INFO

Clock and Date

The Navion™ R5000's clock and date are always displayed on the main screen in the lower left hand corner.

Clock and Date Buttons & Controls



Viewing Clock and Date in the Active Window

- 1) Press the **INFO** button until **Clock** is highlighted.
- 2) Press the **SEL** button or wait until **Clock** is selected automatically.



Caution

If power is removed from the R5000, the clock and date will need to be reset.

INFO

Setting the Clock and Date

- 1) Press the **INFO** button repeatedly until **Clock** is highlighted.
- 2) Press the **SEL** button to select **Clock** or wait until clock is automatically selected.
- 3) Press **SEL** button to edit the time and date values.
- 4) Use the **LEFT** and **RIGHT** arrow keys to select the field you want to modify.
- 5) Use the **UP** and **DOWN** arrow keys to change the highlighted field
- 6) When all of the changes have been made, press the **SEL** button to return to the **Clock** display.

Setting Clock and Date Buttons & Controls



INFO

Tire Pressure Monitor (Tires)

Using the optional tire pressure sensors installed on each tire, the Navion™ R5000 can monitor the vehicle's tire pressure and alert you to possible tire pressure problems.

Tire Pressure Monitor Controls & Buttons



Tire Pressure Sensor Operation

Tire pressure is monitored approximately every 5 minutes with sensors placed on each tire. If a low pressure condition exists, the tire pressure is monitored more frequently (approximately every 15 seconds). When there is a tire pressure alarm condition such as low pressure or low sensor battery, an alarm in red will appear on your screen, alerting you to the potential problem. The system generates four different alarm conditions which are described in the following table.

Tire Pressure Alarms and Conditions Table

Alarm	Condition
Low pressure	Tire pressure is 12.5% below its initial value. PULL OVER, INSPECT TIRE AND REPAIR.
Critical low pressure	Tire pressure is 25% below its initial value. PULL OVER, INSPECT TIRE AND REPAIR.
Missing alarm	Navion™ R5000 has not received a status update from the sensor in the last 15-30 minutes.
Low battery	Sensor's battery is low – the sensor should be replaced.

INFO

Installing Tire Pressure Sensors

The sensors determine operating pressure of the tire when the sensor is first installed. Therefore the tire pressure at the time of installation is **CRITICAL!** All tires **MUST** be inflated to the manufacturer's recommended cold pressures while the tires are **cold**. Refer to the owner's manual.



Caution

Install the tire pressure sensors on the tires when they are still cold. Failure to install at this "cold" temperature may cause false alerts.

Carefully inspect tires and valve stems prior to installation of the system to ensure that they are in good condition. **DEFECTIVE VALVE STEMS MUST BE REPLACED. THE DILL VALVE (small valve inside the valve stem) MUST DEPRESS FULLY AND RELEASE AIR FOR THE SENSOR TO ACTIVATE.** The sensor will not activate properly if the dill valve is not the proper length (a common problem).

- 1) Press the **INFO** button repeatedly until **Tires** is highlighted.
- 2) Press **SEL** or wait until **Tires** is automatically selected.
- 3) Using the **FOUR-WAY** arrow keys, select the tire to add a tire pressure sensor.
- 4) Hold **SEL** until the system prompts you to add a sensor. To abort adding a sensor, tap the **SEL** button.
- 5) Screw the tire pressure sensor onto the tire selected. **TIGHTEN FIRMLY BY HAND.** You should hear the "hiss" of released air when the sensor is being screwed on. Hold the valve stem with your free hand and tighten the sensor securely.



Caution

Using a tool to tighten the sensor can damage the sensor and nullify the warranty.

- 6) Wait for system to report new tire added (a green tire icon appears). This can take up to one minute.

In the unlikely event that the system has not detected the sensor within one minute after screwing on the sensor, remove the sensor, wait one minute, and then reattach the sensor to tire. (The system can be left in 'add sensor' mode during this process.) Repeat this step until the sensor is detected.

- 7) Repeat steps 1-6 for each tire.

After installing the sensors, check for leaks by thoroughly covering the sensor, extension and valve stem with a solution of one part liquid soap to two parts water and look for bubbles indicating a leak.

Note: Once a sensor is added to the system, the sensor remains associated with that tire position until deleted, regardless of attachment/removal from the actual tire.

INFO

Removing Tire Pressure Sensors

- 1) Press the **INFO** button repeatedly until **Tires** is highlighted.
- 2) Press **SEL** or wait until **Tires** is automatically selected.
- 3) Using the **FOUR-WAY** arrow keys, select the tire where the tire pressure sensor is to be removed.
- 4) Hold **SEL** until the system prompts you to delete a sensor.
- 5) Use the **FOUR-WAY** arrow keys to toggle between Yes and No.
- 6) Press **SEL** to confirm or cancel the operation.
- 7) Remove the tire pressure sensor from the selected tire.

Replacing Tire Pressure Sensors

To replace a tire pressure sensor, the existing tire pressure sensor must be removed from the tire then a new sensor must be added to the tire.

- 1) Follow the “Remove Tire Pressure Sensors” instructions to remove the current sensor from the tire.
- 2) Add the new tire pressure sensor by following the “Installing Tire Pressure Sensors” instructions.

Tire Pressure Alarms

A red alarm notification will appear in the Background Window if there is a tire pressure alarm condition. If there is an alarm, **PULL OVER, INSPECT TIRE AND REPAIR.**

To view alarm conditions:

- 1) Press the **INFO** button repeatedly until **Tires** is highlighted.
- 2) Press **SEL** or wait until **Tires** is automatically selected. The tires with the alarm condition will be shown in **RED**.
- 3) To view the tire pressure use the **FOUR-WAY** arrow keys to select the tire. The pressure will display will be displayed for the selected tire.

To disable and enable an alarm:

- 1) Press the **INFO** button until **Alarm** is highlighted.
- 2) When in the **Alarm** screen, use the **UP** and **DOWN** arrow keys to highlight the alarm of interest.
- 3) Press the **MINUS (-)** key to disable the Alarm.
- 4) To enable an alarm, press the **PLUS (+)** key.

NAV

Navigation (NAV)

The Navion™ R5000 includes support for the optional Garmin GVN52 Navigation system. Please refer to the Garmin User's Manual included with your RV for information regarding this Application.

When navigating, carefully compare information displayed on the unit to all available navigation sources, including information from street signs, visual sightings, and maps. Do not enter destinations, change settings or access any functions requiring prolonged use of the controls of the unit while operating your motor vehicle. For safety, pull off the road before making any adjustments to the system or resolving any navigation discrepancies or questions.



Warning

You assume total responsibility and risk for using this device. Failure to pay attention to the operation of your vehicle could result in death, serious injury, or property damage. Do not attempt to adjust this device while driving or permit viewing the screen to distract you from safe vehicle operation.

Navigation Screen Buttons & Controls



Accessing the Navigation MAP

- 1) Press the **NAV** button to access the GARMIN navigation system.
- 2) Use the **FOUR-WAY** arrow keys to pan around a map.
- 3) Use the **MINUS (-)** and **PLUS (+)** keys to zoom out and into the map.

NAV

- 4) The GARMIN remote control can also be used for navigation.

Refer to the GARMIN GVN 52 manual for information on the use of the GARMIN Navigation system.

- 5) Press the **MENU** button quickly to access the GARMIN menus.

Use the **FOUR-WAY** arrow keys to move around the GARMIN menus. The menu item will be highlighted when selected.

Use **SEL** to select the highlighted menu.

Refer to the GARMIN GVN 52 manual for information on the use of the GARMIN Navigation system.

NAV

Configuring Navigation Options

Navigation options allow you to hear navigation prompts and audio through the R5000. The options are:

Route Audio to Main Speakers – Navigation prompts will interrupt current audio source so that navigation prompts can be heard. This would not normally be checked, if the Garmin GVN52 has the external speaker. It would be checked if there is no external speaker attached to the Garmin GVN52.

Always Listen – When Navigation is selected as the primary application, Garmin audio is always heard regardless of selected audio application. This is typically used when the Garmin GVN52 unit has XM radio support.

- 1) Press and hold the **MENU** button to view the options.
- 2) Move to the **Settings** tab with the **LEFT** or **RIGHT** arrow key.
- 3) Use the **UP** and **DOWN** arrow key to highlight the option.
- 4) Press the **SEL** button to check the desired selection.
- 5) Press the **MENU** button again to return Navigation display.



Maintenance

Your product is designed and manufactured to ensure a minimum of maintenance. Cleaning hints follow.

- 1) Keep the display clean of dust and debris.
- 2) Use a dry soft cloth for routine exterior cleaning. Never use benzene, thinner or other solvents.
- 3) **Do not put or spray liquids directly on the screen.** Avoid using ammonia-based cleaners and solvents such as acetone. Moisture intrusion into the unit may cause a malfunction.
- 4) Use a duster or a soft, lint-free cloth (no paper towels) to gently clean the display and front panel controls. When needed, slightly moisten a soft lint-free cloth with water and gently buff the screen.
- 5) To avoid damaging the unit, do not touch the screen with your fingers or any other items. Do not put pressure on the screen because it could damage it.
- 6) Avoid spilling liquids or food on the unit, as it may cause the system to malfunction.

Troubleshooting

If You Suspect Something is Wrong

Check and take steps as described below. If the described suggestions do not solve the problem, contact Lectronix, Inc (see Appendix B). Only qualified personnel should service the product. Always refer diagnostics and repair to professionals. Lectronix, Inc. shall not be liable for any accidents arising out of neglect or attempts to repair the unit.

	Warning	Do not use the unit if you suspect faulty operation. Never try to repair the unit by yourself.
---	----------------	--

Common Problems

The following tables provide possible solutions to common system problems.

Problem	Possible Cause	Possible Solution
No power to the unit	The power cord (battery, power and ground) is connected improperly	Check the wiring.
No Sound	Mute is set to on.	Set mute to off. Push the volume knob momentarily.
No Sound	The speaker lines are not wired correctly, or there is a break or poor contact	Check the wiring in accordance with the wiring diagram. (Installation Instructions)
Noise	The contact of the ground lead is poor.	Make sure that the ground lead is securely connected to an unpainted part of the chassis.
Noise is made in step with engine revolutions	Alternator noise comes from the vehicle.	Change the wiring position of the ground lead. Mount a noise filter on the power supply.
Some operations are not executable	Some operations are not executable in particular modes such as menu mode	Read the operating instructions carefully and cancel the mode. If the unit is still out of order, consult your dealer.
The speaker channels are reversed between right and left	The plus and minus terminals at right and left channels of speakers are reversed.	Consult the wiring diagram and correct wiring problems.

Radio Problems

Problem	Possible Cause	Possible Solution
Poor reception or noise	Antenna installation or wiring of the antenna cable is faulty.	Check whether the antenna mounting position and its wiring are correct.

CD Problems

Problem	Possible Cause	Possible Solution
No playback	The disc is inserted upside down.	Insert the disc correctly.
No playback	There is a flaw or foreign object on the disc.	Remove the foreign object, or use a flawless disc.
Sound skipping or noise	There is a flaw or foreign object on the disc.	Remove the foreign object, or use a flawless disc.

Playing MP3 / WMA File Problems Table

Problem	Possible Cause	Possible Solution
No playback or disc ejected	The disc has unplayable formatted data.	Refer to the description about MP3/WMA for playable sound data.
The CD-R/RWs that are playable on other devices are not playable on this unit	The playability of some CD-R/RWs may depend on the combination of media, recording software and recorder used even if these CD-R/RWs are playable on other devices such as a PC.	Make CD-R/RWs in a different combination of media, recording software and recorder after referring to the description about MP3/WMA.
Sound skipping or noise	There is a flaw or foreign objects on the disc.	Remove the foreign objects, or use a flawless disc
Sound skipping or noise	Playing VBR (Variable Bit Rate) files may cause sound skipping.	Play Non-VBR files.

Display Setting Problems

Problem	Possible Cause	Possible Solution
The picture is dark. The picture is whitish. Something is wrong with the picture. The picture is light in color.	The screen is not adjusted properly.	Adjust the display through the MENU option. See the Adjusting the Display section.

Sound Problems

Problem	Possible Cause	Possible Solutions
No sound from speaker	Cables are not connected correctly	Connect the cables correctly.
Left and right sounds are reversed	The speakers are not connected correctly.	Connect the speaker wires to the correct speaker.

Appendix A: One Year Limited Warranty

This R5000 is warranted to be free from defects in material or workmanship for one year from the date of purchase. During this period, Lectronix, Inc. will replace any R5000 that fail in normal use where used in accordance with this users' manual. This warranty does not cover failures due to abuse, misuse, improper installation, accident, or unauthorized alteration or repairs. This warranty does not extend to any add-on modules including the Garmin GVN 52 navigation system or the Sirius Satellite Radio. This warranty is for replacement R5000 units only and does not cover any cost of removal of the defective unit or installation of the replacement unit. Replacement units may include rebuilt or refurbished components.

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER STATUTORY, EXPRESS OR IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR ANY WARRANTY REGARDING THE ACCURACY OF INFORMATIONAL CONTENT INCLUDED OR DISPLAYED BY THE R5000. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE.

IN NO EVENT SHALL LECTRONIX OR ITS LICENSORS OR ITS SUPPLIERS BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM THE USE, MISUSE, OR INABILITY TO USE THE R5000 OR FROM ANY DEFECTS IN THE PRODUCT. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

Lectronix retains the exclusive right to replace the R5000 or offer a full refund of the purchase price at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY.

To obtain warranty service, contact your dealer or alternatively contact Lectronix, Inc. at 1-888-227-5455. A copy of the original sales receipt is required as the proof of purchase for warranty services.

Lectronix, Inc.
5858 Enterprise Drive
Lansing, MI 48911

Appendix B: Service and Technical Support

There are no user serviceable components within the Navion™ R5000. Service is provided by Authorized Service providers only.

Contact Lectronix, Inc.

For help or service, contact Lectronix, Inc. at 1-888-423-1183.

When contacting Lectronix, please have the following system information on hand. To obtain the system information:

- 1) Press the **MENU** button.
- 2) Use the **LEFT** or **RIGHT** arrow key to select the **System** Tab.
- 3) When finished, press the **MENU** button again

The system information screen appears as shown below:

Navion™ R5000 System Information Screen



Appendix C: Software Notice

Software Notice

The product described in this manual includes copyrighted, patented, or patent pending Lectronix, Inc. and third party software. Laws in the United States and other countries preserve for Lectronix, Inc. and third party software providers certain exclusive rights, such as the rights to distribute or reproduce the software. Accordingly, any protected software contained in the product may not be modified, ported, reverse-engineered, distributed, or reproduced in any manner. Furthermore, the purchase of the product shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Lectronix, Inc. or third party software providers except for the normal, non-exclusive, royalty-free license to use the software that arises by operation of law in the sale of this product.

Open Source Software

Lectronix uses open source software in the Navion™ R5000. The open source software used is shown in the following table.

Open Source Software Table

Package	Package Version	Provided As	License Type
ffmpeg	Latest Revision in Use	source	LGPL
id3lib	3.8.3	source	LGPL
u-boot	1.1.1	source	GPL
zlib	1.1.4	source	Custom

CD copies of the source code shown in the above table can be obtained by sending a check in the amount of \$10.00 payable to Lectronix, Inc to:

R5000 Open Source Software
Lectronix, Inc.
5858 Enterprise Drive
Lansing, Michigan 48911


Make sure you include your return address.

Your request will be processed within 8 to 12 weeks.

Appendix D: Navion™ R5000 Technical Specifications

The specifications noted herein are subject to change without notice.

Rear Panel System Connections

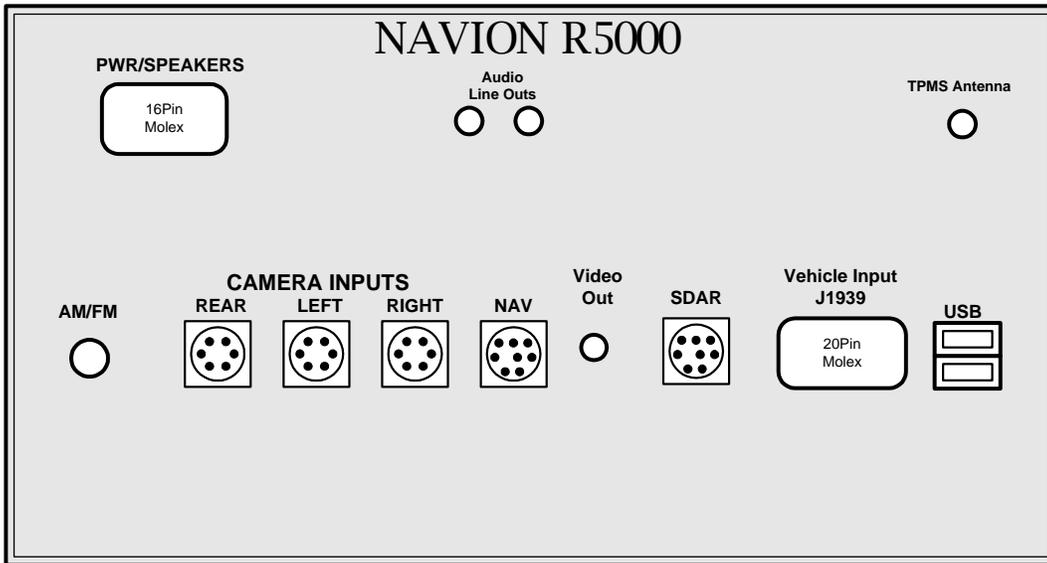

External Connections

External Connections	
Audio Out: Speakers Line out	Four (4) amplified speaker outputs for cockpit One (1) Stereo Pair
Video In: Aux Video	One (1) NTSC auxiliary composite video input.
Video Out	One (1) NTSC auxiliary composite video output
Audio In: Aux Stereo (Two Rear and one Front)	Three (3) stereo aux line inputs. One for satellite radio and one auxiliary on the rear of the unit or one for MP3 players on the front panel.
Camera Inputs: NTSC with Microphone	Three (3) NTSC composite camera inputs with one (1) microphone input for the rear camera
Vehicle Inputs:	
Accessory & Ignition	Input status for key accessory and ignition indications
Turn Indicators	Optional input signal for camera control
Reverse Transmission Input	Optional input signal for camera control
Information Bus	J1939 CAN network interface to vehicle information
IR Input: Remote Controller (Front)	Input IR for system control via remote control
Antenna: AM/FM Radio	Connection for the vehicle AM/FM/WB radio antenna.
Antenna TPMS	Connection for the Tire Pressure Monitoring antenna.
USB: Inputs (One Front, two back)	USB port Version 1.1 (Support for Mass Storage interface)
SDAR: Input	Satellite Radio (SDAR) control and Audio inputs

Technical Performance Specifications

Power and Grounding

Automotive nominal 12 volt, negative ground power.

Mechanical Form Factor

Main Unit

Width	8"
Height	6"
Depth	6"

Environmental

Operating range:	- 10 to 55 °C
Storage range:	- 40 to 85 °C

Cockpit Audio

Speakers

- Four outputs for front and rear stereo, each output a separate BTL amplifier
- Power output of 22W RMS minimum per channel, into 4 Ohms, all channels driven, at 1 KHz, with 14.4V and no more than 5% THD
- Peak Power 50W x 4
- Frequency response 20 to 22,000 Hz at rated power
- All outputs fully short-circuit protected (supply, ground, or across load)

Equalizer

- Five (5) band parametric equalizer
- Preset equalizer curves
- Band adjustments +/-12 dB

Tone Controls

- Bass gain +/- 12 dB
- Tone gain +/- 12 dB

Radio Tuner

FM Tuner

Frequency Range	87.7-107.9 MHz
Sensitivity (20 dB SNR)	19.2 dBf (2.5 uV/75 ohms)
SNR Mono	55.0 dB
SNR Stereo	48.0 dB
Stereo separation	40.0 dB
Distortion Stereo	0.9%

AM Tuner

Frequency Range	530-1710 kHz
Sensitivity	36.2 dBf (17.7 uV/ 75 ohm)

WB Tuner

Frequency Range	162.4-162.55 MHz Channel 1 to 7
Sensitivity (20 dB SNR)	19.2 dBf (2.5 uV / 75 ohm)

Auxiliary Inputs

Inputs used for auxiliary expansion including Satellite radio or Navigation

Aux Stereo Audio

- Two (2) stereo audio input pairs
- Voltage 5.6 Vpp

Aux Video

- One (1) NTSC composite video input
- Video input level 1 Vpp (75 ohms).

Auxiliary Outputs

Outputs used for auxiliary expansion including video monitor expansion and audio to vehicle surround sound.

Aux Stereo Audio

- One (1) stereo audio output pair
- Voltage 2.8 Vpp

Aux Video

- One (1) NTSC composite video Output
- Video Output level 1 Vpp (75 ohms).

Camera Inputs

- Three (3) NTSC Video
- One (1) Mono microphone inputs
- Video level 1 Vpp (75 ohms).
- Camera Power 8.1V at 150 ma

Standard In-Dash Display

- TFT LCD Flat Panel
- Resolution: 480 x 234 pixels
- Diagonal size: 7.0 inch
- Luminance: 400 cd/m²
- Response time: 50 msec
- Contrast ratio: 150
- Minimum lamp life: 10,000 hrs
- Inverter dimming option

Optical Disc Media Formats

- CD-DA – Red Book
- CD-R/RW – Orange Book (MP3)
- CD-I, CD-ROM XA

File System Support

ISO9660 and Joliet CD file systems

Audio Digital Formats and Decode

Digital audio decoders

- MP3 (32 to 320 kbps and VBR)
- WMA (48 to 192 kbps)
- Linear PCM 16-bit 44.1 KHz (Standard audio CD)

Digital audio related formats

- ID3-Tag (v1 and v2)
- Playlists
- CD-Text

Appendix E: Tire Pressure Monitoring Option

The Navion™ R5000 includes the RF receiver needed to monitor the tire pressure sensors. The setup, control, and monitoring is all done from the R5000 LCD display.

Contact Lectronix, Inc. to purchase the optional Navion™ Tire Pressure monitoring kit (see Appendix B for contact information). The Tire Pressure monitoring kit includes the following:

- Tire Pressure Sensors (mount to valve stem)
- Coax wiring and antenna
- Setup instructions

Tire Pressure Sensors



Sensor Specifications

Pressure Pro Sensor Specifications

Sensor Transmit Range	Over 100 ft. Line-of-Sight
Operating Frequency	433.92 MHz FM
Sensor Weight	Approx 2/3 oz.
Sensor Dimensions	1.011" High x 1.11" Diameter
Sensor Battery	Internal Non Rechargeable / Non Replaceable
Sensor Pressure Range	10 +/-1 psi to 150 +/- 5 psi
Sensor Low Voltage Shutdown	2.2 Volts

The tire pressure sensors comply with Part 15, Class B of the FCC rules. Any unauthorized changes or modifications to the tire pressure sensors would void the user's authority to operate the devices.